



RESET TO FACTORY DEFAULTS

How to Recover Your WiFiRanger

WHEN SHOULD IT BE RESET?

In the case of forgetting your custom password, a factory reset is needed. Other cases may also require a factory reset, but this guide is primarily for those recovering their otherwise inaccessible WiFiRanger.

Examples of instances that require a factory reset



Password Forgotten - restores to changemenowXXXX *

Network Forgotten - restores to Pvt.WiFiRanger.XXXX *

Otherwise Inaccessible - may correct other settings

* XXXX IS FILLED WITH LAST FOUR DIGITS OF WFR ID, FOR EXAMPLE:
774067 WOULD BE PVT.WIFIRANGER.**4067** AND CHANGEMENOW**4067**

COMPATIBILITY

The following reset method works with firmware versions 6.6.5+

RESET BUTTON NOTATION

The reset button on any WiFiRanger product is used only during the manufacturing process, and it will not reset the unit to factory defaults

STEP 1

Power unit and wait a couple minutes



WIFIRANGER MUST BE POWERED UP WITH FIRMWARE FULLY LOADED BEFORE REBOOTING



STEP 2

Reboot router 4 total times separated by various time intervals

UNPLUG THEN *QUICKLY* PLUG BACK INTO POWER TO REBOOT



REBOOT WiFiRanger FOR 1ST TIME



REBOOT 2MIN 30SEC AFTER 1ST REBOOT



REBOOT 3MIN 30SEC AFTER 2ND REBOOT



REBOOT 3MIN 30SEC AFTER 3RD REBOOT

STEP 3

Connect to WiFiRanger using default settings



DETERMINE **XX** AND **YY** FROM
NETWORK BROADCAST OF YOUR SKY  

NETWORK **Pvt.WiFiRanger.XXYY**

PASSWORD **changemenowXXYY**

CONTROL PANEL ADDRESS
10.1XX.YY.1:8080

FOR EXAMPLE

Pvt.WiFiRanger.4067  

changemenow4067

10.140.67.1:8080

Intelligent WiFi Routers™